




## INSTRUCTION SHEET FOR #1050

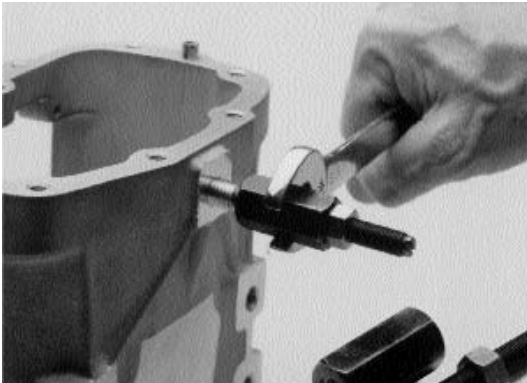

No.1050-1

No.1049

No.2205

### TRANSMISSION STUD INSTALLER TOOL USE ON ALL BIG TWIN TRANSMISSIONS WITH BOTTOM STUDS. ALL 4 & 5 SPEEDS.

1. Refer to H.D.® Service Manual for specifications.
2. Install No.1049 lubed stud into installer body No.1050-1, stop 1-2 threads before end of the last thread. Screw into tool the lubed adjuster, No.1049, until it contacts the end of the stud.
3. Tighten lock nut No. 2205.
4. Install stud in case, using JIMS® No. 4502 threadlocker, all the way down until tool contacts case.

**CAUTION:** For full threaded studs only.

5. To remove tool loosen lock nut and screw, remove tool from installed stud.


CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR OVER 150 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

**"FROM THE TRACK... TO THE STREET!"**

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422



## INSTRUCTION SHEET FOR #1050

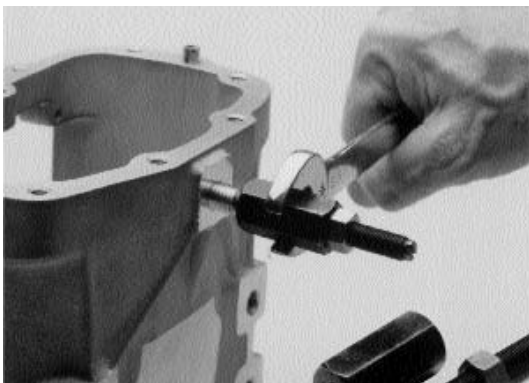

No.1050-1

No.1049

No.2205

### TRANSMISSION STUD INSTALLER TOOL USE ON ALL BIG TWIN TRANSMISSIONS WITH BOTTOM STUDS. ALL 4 & 5 SPEEDS.

1. Refer to H.D.® Service Manual for specifications.
2. Install No.1049 lubed stud into installer body No.1050-1, stop 1-2 threads before end of the last thread. Screw into tool the lubed adjuster, No.1049, until it contacts the end of the stud.
3. Tighten lock nut No. 2205.
4. Install stud in case, using JIMS® No. 4502 threadlocker, all the way down until tool contacts case.

**CAUTION:** For full threaded studs only.

5. To remove tool loosen lock nut and screw, remove tool from installed stud.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR OVER 150 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

**"FROM THE TRACK... TO THE STREET!"**

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422