




A Division of Thiessen Products, Inc.

INSTRUCTION SHEET FOR TOOL No.1276

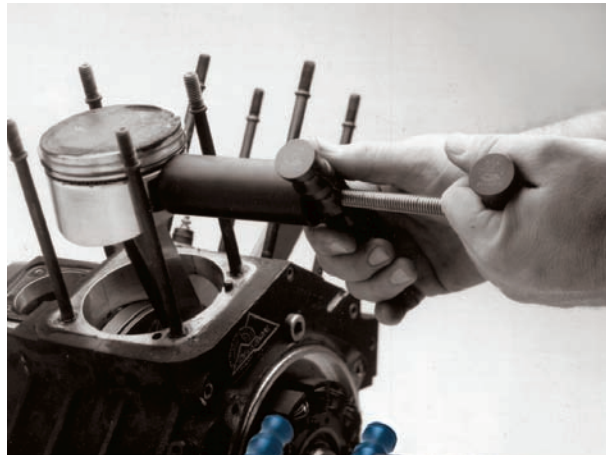

WRIST PIN REMOVER
USE ON ALL MODELS INCLUDING
TWIN CAM 88™

This new JIMS tool will cut the time it takes to remove wrist pins, this simple tool can be used easily by one person. No need to get another technician to hold the piston while you drift the pin out.



Assemble tool per diagram

Note: Read instructions before performing work

1. Remove cylinders as per H-D® service manual.
2. Remove wrist pin piston retaining rings from both sides. If washer #1276-3 will clear retaining ring, only one ring will need to be removed before extracting wrist pin.

CAUTION: Wear safety glasses, retaining rings are under extreme pressure.

Note: Put a clean rag over the ring you are removing to slow it down and cover all open motor parts.

3. Insert threaded rod, (#6) small end first, through the wrist pin, install washer, (#4) and nut (#1).

Note: Apply lube to threads and face of handle.

4. Turn remover handle against guide shaft until pin is sufficiently removed from piston.

Note: Make sure bore of receiver is over wrist pin.

5. Repeat steps 1 through 4 for the other wrist pin.

PARTS AVAILABLE SEPARATELY			
No.	Qty.	Description	Part No.
1	1	Nut	2035
2	1	Handle, Lock, Remover, Wrist Pin	1276-5
3	1	Handle, Remover, Wrist Pin	1276-4
4	1	Washer, Remover, Wrist Pin 0.750" Dia.	1276-3
5	1	Guide Shaft, Remover, Wrist Pin	1276-2
6	1	Rod, Remover, Wrist Pin	1276-1
7	1	Instruction Sheet	1276-IS

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL. SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"From the Track... To the Street!"