



INSTRUCTION SHEET FOR #2121A

PIN EXTRACTOR - USE ON ALL MODELS



1. Disconnect electrical plug and battery. Refer to H.D.® Service Manual for specifications.
2. While holding plug, firmly push wire toward the pin to be removed.
3. While holding wire slide outer sleeve of extractor down onto pin until it firmly bottoms.
4. While holding plug slowly rotate pin remover in a circular motion while pushing down firmly on extractor button.
5. Remove pin from plug.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"FROM THE TRACK... TO THE STREET!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422



INSTRUCTION SHEET FOR #2121A

PIN EXTRACTOR - USE ON ALL MODELS



1. Disconnect electrical plug and battery. Refer to H.D.® Service Manual for specifications.
2. While holding plug, firmly push wire toward the pin to be removed.
3. While holding wire slide outer sleeve of extractor down onto pin until it firmly bottoms.
4. While holding plug slowly rotate pin remover in a circular motion while pushing down firmly on extractor button.
5. Remove pin from plug.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"FROM THE TRACK... TO THE STREET!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422