



# Instruction Sheet For Tool #97235-55B

## SPROCKET SHAFT BEARING NUT WRENCH

Use to install and remove bearing nut on Big Twin 1955-68



*WARNING: Be sure to disconnect the battery ground cable.*

1. Refer to H.D.® Service Manual for specifications.
2. Make sure the two holes in the sprocket shaft bearing nut are free from dirt and burrs.
3. Slip tool over sprocket shaft and into the two holes, you can tap on end of tool with soft hammer to seat it. CAUTION: This nut has a left hand thread.
4. See H.D.® Service Manual for specifications.
5. If you are installing an aftermarket bearing nut seal, use JIMS® part #24029-KIT for a no leak seal.

CAUTION: Wear safety glasses. Excessive force may damage parts! See JIMS® catalog for over 100 other top quality professional tools. The last tools you will ever need to buy.

***"From The Track... To The Street!"***

555 Dawson Drive, Camarillo, CA 93012 • Phone 805-482-6913 • Fax 805-482-7422