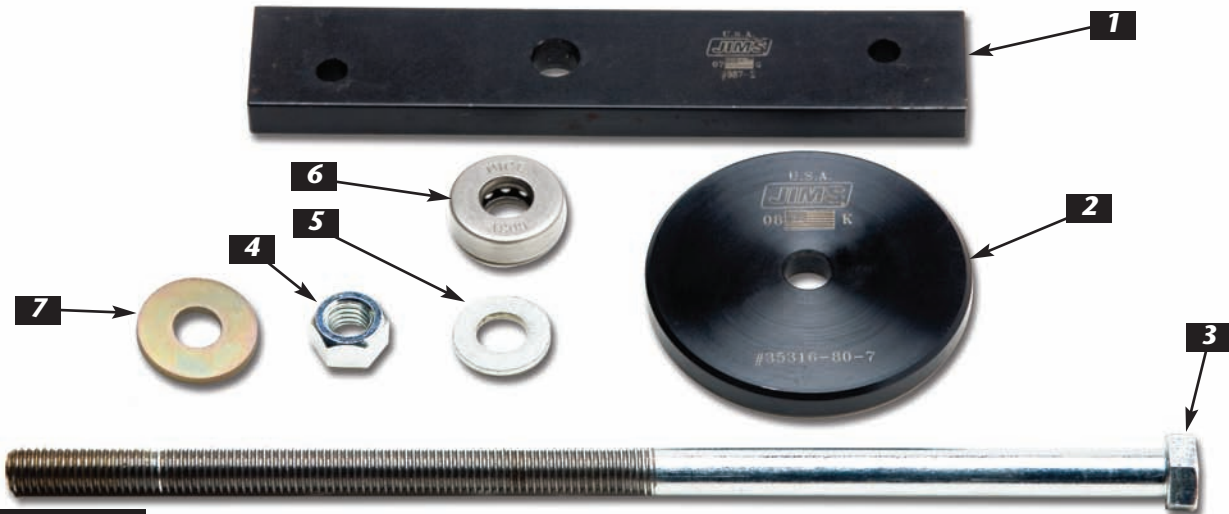




A Division of Thiessen Products, Inc.

# INSTRUCTION SHEET FOR TOOL #901

**H-D CRUISE DRIVE 6-SPEED MAIN DRIVE GEAR REMOVAL TOOL  
USE ON ANY H-D 6-SPEED CRUISE DRIVE TRANSMISSION 2006 TO PRESENT**



**FIG 1**

**Other recommended JIMS® tools for H-D Cruise Drive 6-speed:**

- |  |   |
|--|---|
| No. 989 Mainshaft pulley locknut socket tool | No. 984 Trap door remover tool                    |
| No. 911 Trap door bearing remover tool       | No. 985 Shift fork shaft remover tool             |
| No. 972 Main drive gear seal installer tool  | No. 992 Modular transmission stand, all Twin Cams |
| No. 34902-84 Mainshaft race remover          |   |

**Read complete instructions thoroughly before disassembling or assembling. Refer to pictures, parts lists and reference drawings.**

**NOTE: IF YOU DO NOT KNOW WHAT YOU'RE DOING , DO NOT DO IT! ALWAYS WEAR SAFETY GLASSES OR OTHER FACE AND EYE PROTECTION SUCH AS A FULL FACE AND EYE PROTECTION. JIM'S IS NOT RESPONSIBLE FOR DAMAGE , INJURY, YOUR WORK, OR THE QUALITY AND SAFETY OF YOUR WORK.**

**RECOMMENDED TOOLS FOR USE WITH THIS TOOL**

- 2 - 3/4" Box end wrench
- 1 - 1/4" Allen wrench
- 1- Quality retaining ring pliers
- 1 - H-D Service Manual

**Note:** Do not use impact wrench on this tool.

<b>PARTS AVAILABLE SEPARATELY</b>			
No.	Qty.	Description	Part No.
1	1	INSTALLATION BAR	987-2
2	1	MAINDRIVE GEAR WASHER	35316-80-7
3	1	SCREW 12" LG	2138
4	1	NUT	2136
5	1	WASHER	2038
6	1	BEARING	2010
7	1	WASHER	1735

**REMOVING THE MAIN DRIVE GEAR**

1. Refer to H-D Service Manual for tear down of the transmission assembly to the point of removing the main drive gear.

*Performance Parts For Harley-Davidson Motorcycles*

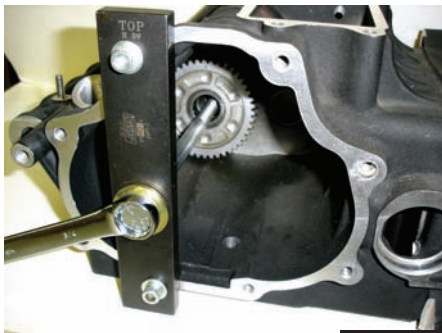
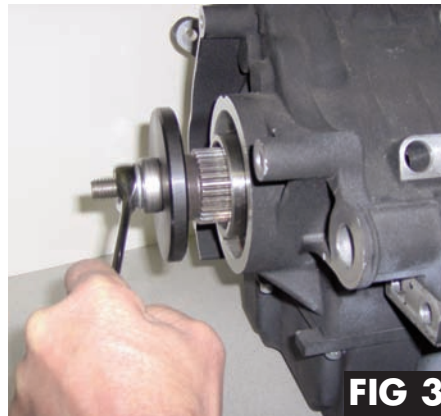
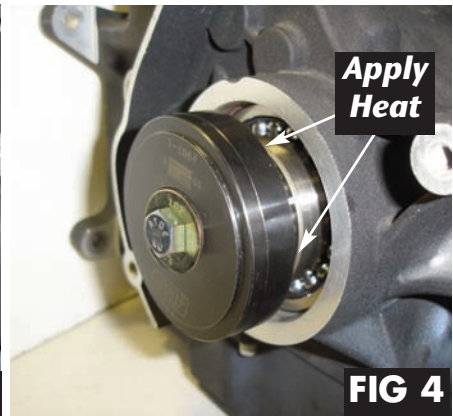


A Division of Thiessen Products, Inc.

## INSTRUCTION SHEET FOR TOOL #901

2. Attach the installation bar tool No. **987-2** to the trap door side of case. Use two allen screws with washers H-D No.**3249** from existing trap door mounting hardware. **See Fig 2** for door mounting holes to locate plate correctly on case. Also, the plate has been laser marked with "Top" on the plate and should face you.  
**See Fig 2.**
3. Install No. **1735** onto No. **2138** 12" long screw then insert through center hole of No. **987-2** installation bar and into case, through the mainshaft gear. **See Fig 2.**
4. Lube threads on end of screw No. **2138** hanging out of main drive gear. Install No.**35316-80-7** maindrive gear washer, bearing No. **2010**, No. **2038** washer and then No. **2136** nut on screw end. **See Fig 3.**
5. Use two 3/4" box end wrenches to remove gear. Hold No. **2138** screw with one wrench while using the other to tighten nut No. **2136** clockwise and the gear will come loose from the bearing.

**Caution:** *When performing the next step of removing the gear from the bearing you may encounter some resistance beyond what this tool can handle and could damage the case. If you feel a binding stop and apply heat to the bearing race as shown. Do not exceed 210 degrees. This should free up the gear. If that doesn't work it will be your decision on how to extract the main drive gear and bearing. See Fig 2 & 4*

**FIG 2****FIG 3****FIG 4**

**CAUTION: WEAR SAFETY GLASSES OVER YOUR EYE'S.**  
 SEE JIMS® CATALOG FOR HUNDREDS OF TOP QUALITY PROFESSIONAL TOOLS.  
 THE LAST TOOLS YOU WILL EVER NEED TO BUY.

*Performance Parts For Harley-Davidson Motorcycles*

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224